

TOP★GUN

TRUCK ACCESSORIES

1-800-504-5684

www.topgunproducts.com

Chevrolet 1500 2007-2008 Grille Guard

Note: In order to install this model, cutting the air dam is required.

1) Cut air dam on the outside of tow hook 1" x 1" . Slide main bracket through cutout.

(see figure 1)

2) Remove (3) nuts from bolts that hold tow hook in place. Do not remove bolts from holes. Install main bracket over exposed bolts and reinstall nuts.

(see figure 2)

3) Lift grille guard up to the brackets installed and secure in place with (6) ½" x 1 ½" black carriage bolts provided.

Moderately tighten to allow for adjustment.

(see figure 3)



Figure 1



Figure 2



Figure 3

4) Lift hood and remove (8) plastic pins that secure plastic radiator cover. Set aside for future installation. (see figure 4)



Figure 4

5) Remove (2) bolts found between factory grill and radiator above truck frame. Set aside for future installation. (see figure 5)

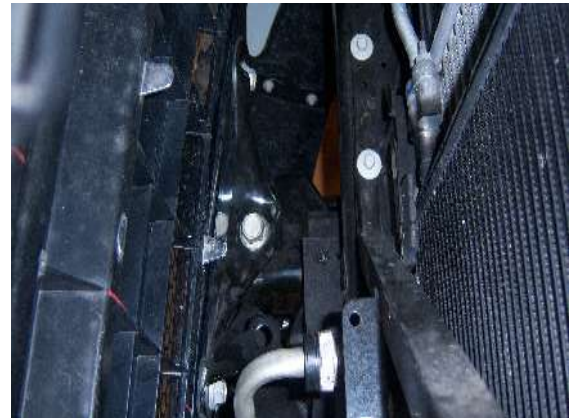


Figure 5

6) Slide top bracket provided between factory grill and factory bumper. Secure with bolts removed in step 5.

7) Secure opposite end of top bracket with (2) 1/2" x 1 1/2" black carriage bolts provided. (see figure 6)



Figure 6

8) Align grille guard and torque all bolts with 75 lbs of torque.

Installation Kit Provided:	(8) 1/2 "x 1 1/2 "
(1) main bracket right	black carriage bolts
(1) main bracket left	(8) 1/2" serrated nuts black
(1) top bracket right	(8) 1/2" flat washers black
(1) top bracket left	